






SEISMIC BRACING TABLE

ASSEMBLY MK # (200)	LOCATION	DIMENSIONS		LOOS & CO. MODEL #
		A	L	
SBM-1	EXHAUST FAN EF-1 & EF-2	3'-10"	5'-0"	3/8"
SBM-2	AIR HANDLER AC-1	5'-0"	6'-3"	1/2"
SBM-3	CONDENSER	3'-10"	5'-6"	1/2"
SBO-1	EXHAUST DUCT	3'-4"	4'-4"	3/8"
SBD-2	SUPPLY DUCT	4'-6"	6'-8"	3/8"
SBO-3	SUPPLY DUCT	5'-9"	7'-3"	3/8"

- NOTE:**
- ADDITIONAL LENGTH OF CABLE HAS BEEN ALLOWED IN DIM. "L" TO PROVIDE FLEXIBILITY OF INSTALLATION. EXTRA LENGTHS SHALL BE CUT OFF AT SITE AFTER INSTALLATION IS COMPLETE.
 - FOR LOCATIONS OF BRACING, SEE KEY PLAN (MECHANICAL).
 - BRACING MAY BE ROTATED IN PLAN VIEW BY A MAXIMUM ANGLE OF $(\pm) 22.5^\circ$ TO AVOID INTERFERENCE.
 - ALL CABLE BRCS ARE BASED ON PRODUCTS OF LOOS & CO., NAPLES, FL. APPROVED SUBSTITUTIONS ARE PERMISSIBLE.

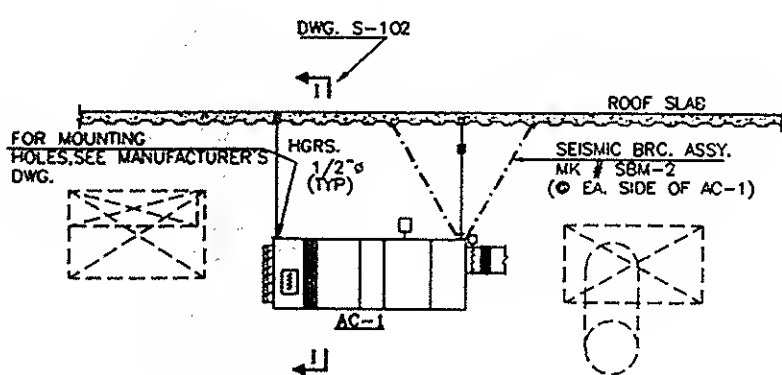

NOTE:
FOR SEISMIC BRC. IN OTHER DIRECTION, SEE DWG. S-B01

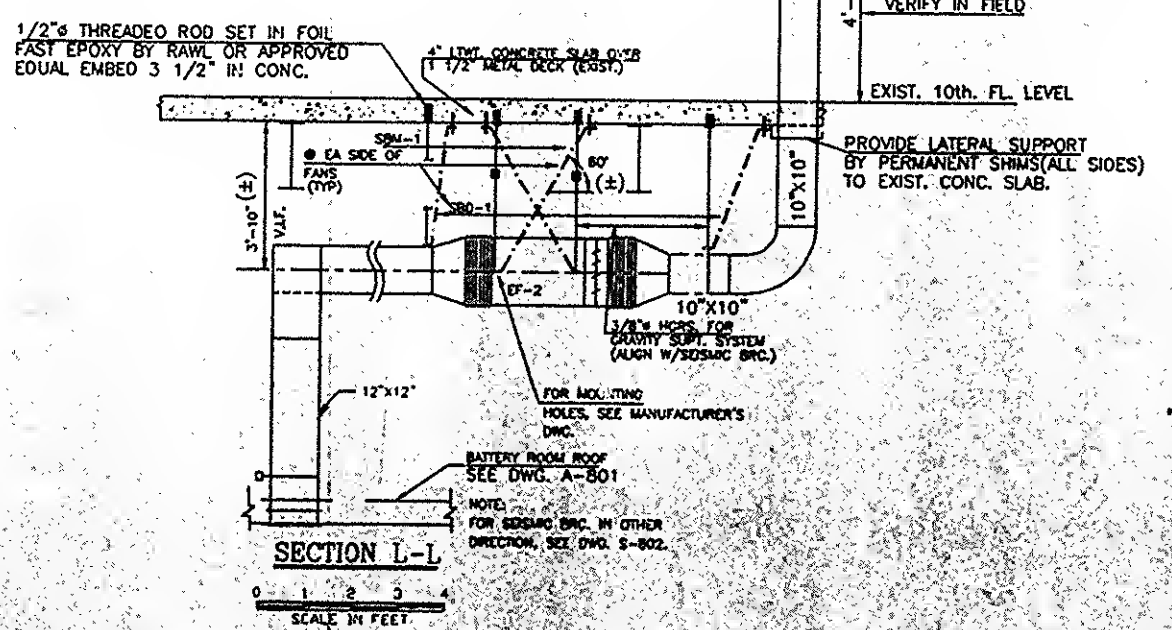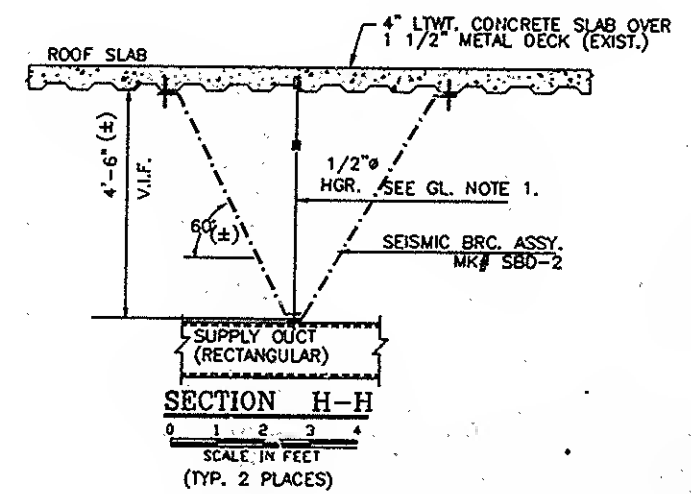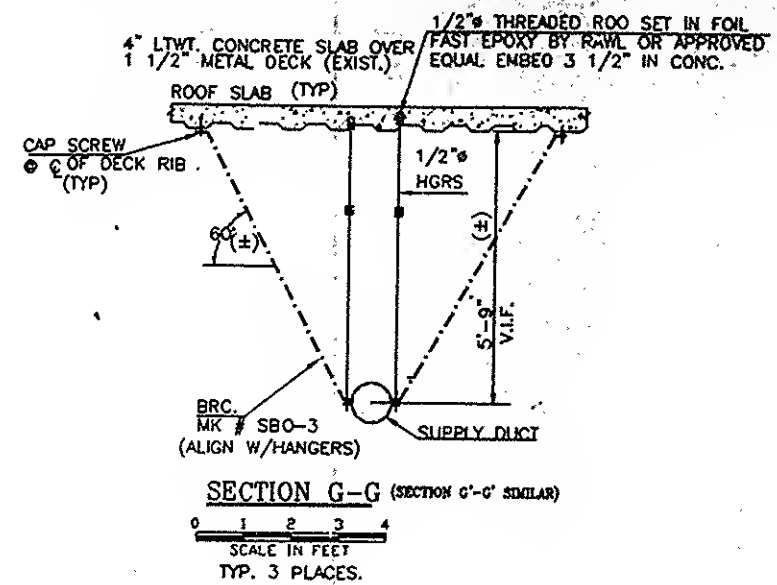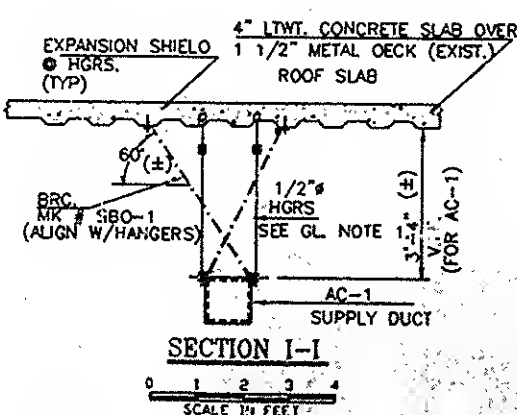

GEN

- HA
- AT
- AC
- MA
- IN
- EN
- SP
- FO
- SE
- FC
- TR
- RE
- OC
- AL
- &